



NOTE:

- 1) THE VENTILATING PIPE SHALL BE CONNECTED TO THE VENTILATING STACK ABOVE THE SPILL OVER LEVEL OF THE FLOOR TRAP.
- 2) CLEANING EYE/INSPECTION OPENING SHALL BE ORIENTED TO ALLOW PIPE CLEANING/INSPECTION.

ALL DIMENSIONS ARE IN mm.

ISSUED : DEC 2021	SCALES
LAST REVIEWED : NOV 2021	NOT TO SCALE

CONNECTION OF FLOOR TRAP VENTILATING PIPE TO VENTILATING STACK